

---

# User Manual

## Get to know your phone

Front:



---

## Rear:



### Attention :

. This is "dual card dual standby single pass" phone, you cannot use voice or data services at the same time when two SIM in the phone.

. When one of the cards is on a call, the other card can not answer the call. If someone dials another card at this time, he may hear the message "The user you dialed is temporarily unable to connect".

. When one of the cards is using the data service, the other card's data service can not be used.


---

This is a single-pass feature that reduces power consumption and increases standby time, independent of carrier network conditions.

## battery charging

---

Use charger to charge battery :

- (1) When the battery is charged normally, the battery status icon will scroll.
- (2) after full, please cut off the charger and AC power connection, and then disconnect the connection with the device.
- (3)  ***The initial use of a new battery several times in a row after several full charge and discharge, and then continuous 10 hours or more, in order to achieve the best performance.***

Please charge in time, excessive discharge will damage the battery.

It is normal that the phone has a slight fever during charging,



**Enter in:** Click on the intercom icon or press the PTT key to enter, the intercom starts to receive signal by default.

**Band parameter:** power: High by default, can be set to Low

Gain ( Channel bandwidth ) : default 12.5KHz, can be set to 25KHz

RX/TX( receive/transmit ) : default 409.7500MHz, also can be set between 400~480MHz

Static impatient : 0~8level, default band level1; If you do not enter the Squelch value at the new band, the default is 0 (0 is the monitor mode)

Mute : 0~38level, default 0 (Value is not 0, the two walkie-talkie values need to be consistent in order to send and receive)

**Launch intercom:** In the intercom interface, you can press the PTT button or long press the bottom of the virtual button to launch; intercom backstage can only long press the PTT key to launch

**Volume adjustment :** 8 levels total, default level 6

**Channel list:** Store the channel. You can add a new band, add a long press after the success of the current band to edit and delete operations

**Precautions:** 1. Use the intercom antenna can do long-distance reception, launch

2. Two intercom to receive, launch must in the same band  
3. Multiple machines in the same band, if two or more machines simultaneously launch intercom, will affect the reception

4. the effective distance of intercom is  $\pm 5$  km in the open area, at barrier zone the effective distance is  $\pm 1$  km



## A key for help

---

1. A key call for help default to OFF, please manually open before use
2. You can add up to 5 emergency contact phone numbers in the contact list
3. When an emergency occurs, touch "Start" to send emergency information to the emergency contact and call for help



## make and receive calls

---

### Make call

Tap Dialpad, enter the number, and then tap the dial icon to select "Card 1 / Card 2" to make a call.

### Receive call

When a call comes in, slide the icon "Answer" to the right, slide the call to the left, and slide it up to reject the call.

When the headset is connected, you can also press the button on the headset to answer / end the call.

One key mute when call coming, you can choose to press the switch key, or press the side of the key, the side of the next key.

Please note:

Emergency calls are not only related to network conditions, but also related to local operators and regulations. So, emergency calls can not be used in certain areas or in some cases. Therefore, you can not rely on the device for medical assistance and other important communications .

---



## Contacts

---

From the main menu, tap Contacts, access the Contacts menu, and make a call to a contact in the contacts list, send a message, and so on.

Create a contact

1. From the Home screen, tap Contacts to enter the Contacts menu.
2. Click the "+" icon in the lower right corner to enter the contact add interface.
3. Tap Finish when you have finished entering the information, and save the contact.

Search for a contact

In Contacts, tap the search icon in the lower-left corner of your contacts list, then type your search in the top search box to see your contacts.



## Call records

---

Enter the main menu, select [Phone] to enter the call log menu to view all the call records.

Record all missed calls, received calls, dialed calls. You can choose to make a call, send a message, create a new contact, and edit an existing contact.



## E-mail

---

Creat email account

In this phone you can select the corresponding e-mail to set.

Check and read email

---

In Mail, the Mailbox screen gives you quick access to all your inboxes and other mailboxes.

When you open a mailbox, the e-mail message is retrieved and the most recent message is displayed.◦

## **Web browser**

---

View web page: You can view the page in portrait or landscape mode. The page rotates as the unit rotates, and it automatically adjusts to fit the page.

## **Music**

---

Use the Music app to enjoy your favorite music. Browse the contents of this unit by artist, album, song, playlist.

Search for music: You can enter the name of the song you want to find in the search box.

## **Recorder**

---

Select this function and press the red button to record.

Select the option to enter :

- Sound quality: high and normal
- Record mode: Set to Normal or Conference or Duration recording

You can use this function to record audio files. Note: The recording duration is determined by the remaining capacity of the phone memory.

## **FM radio**

---

Select FM radio, will enter the radio player interface (need to insert headphones to listen).

---

**Channel list:** Store channel, you can manually edit the channel.

**Set up:** Can be set to play at background, open or close the phone speaker; also can set the recording format, sound quality, storage location and channel effects.

**Favorite List:** Enter the list to view the favorite channels.

## SMS

---

Send messages

Tap the "Write" icon in the lower left corner, enter a phone number or name, or tap the + icon to the right of the recipient, and select a contact from the contacts list. Tap the text bar at the top of the keyboard, type a message or click the icon to the left of the text to add a video / image and then "send" the message.

Receive messages

When you have an unread message, the message icon will be displayed at the top of the screen. When you enter the "SMS", you can tap to read the message.

## Calendar

---

Calendars allow you to access your calendar and events at any time.

View the calendar

To toggle the display: Tap Day, Week, Month, Schedule.

Show by date: Swipe up or down to view events in a day by week view.

Week view: Tap a day to view events for that week.

Month view: Tap a day to view events for that month.



---

Schedule shows: All appointments and events appear in the scrolling list.

Add an event

You can create and update calendar events directly on this machine. Click Add New Event. When finished, click Finish to save the event.

## Photos

---

Allows you to take photos and videos, so you can share them with family, friends, and colleagues at any time.

View photos and videos

Photos and videos taken with this phone, they synced from a computer, or stored from an e-mail or multimedia message can be viewed in the "Gallery".

View photos and videos: select the image or video In Gallery and then tapping to view it.

Zoom in on a portion of a photo: Double-tap the position you want to enlarge. Double-tap again to zoom out. You can also use two fingers to zoom in or out.

Delete photos and videos

Tap to select the photos and videos you want to delete. The Delete button shows the number of items you have selected.

Slide show

You can view the album as a slideshow

To view an album as a slideshow: Tap an album, then tap Play Slide Show.

Share photos and videos

---

You can send your photos and videos to Message, Bluetooth, Mail.

Set as wallpaper

You can enter the gallery, select the pictures you need, click "menu" to set a photo wallpaper.

## Camera

---

The camera front and rear cameras. main camera is rear camera. You can use the screen to control the camera and view the photos or videos you have taken.

Take photos and videos

Take photos

To align the target with the camera, tap the camera key. When you take a photo or start recording, a shutter sound is emitted. If you set the ring / mute switch to mute, you can not hear it.

1. Flash: If you are in a low light condition, turn on the flash.
2. Camera settings: You can set the white balance, viewfinder, camera mode, exposure and other settings.

Video

Tap to start recording. In the "camera" interface with flash switch, camera settings, front and rear camera switch shortcut icon

The video button is red when recording. Tap the Video button again to stop recording.

Video player

In the main interface, select "Video Player", you can select the video file to watch.

---

 **File management**

---

You can view the phone storage and SD card storage files, plug the USB cable, you can store the phone and SD card files stored "

 **Download**

---

In the mobile Internet and other websites to download the application or MP3 and pictures will be displayed in the download.

 **Clock**

---

You can view the alarm, world time, stopwatch, timer

Countdown (timer)

Phone built-in countdown function, set a time and click to start the countdown, when the time out, the phone will automatically ring.

Alarm clock

Set the alarm time, ringtone and period.

Stopwatch

To use the stopwatch to time an event: Tap Stopwatch to select Start to enable the stopwatch.

To record round-trip times, tap "Count" after each round-trip.

To pause the stopwatch, tap Stop. Tap START to continue.

 **Calculator**

---

In the Calculator, tap the number and function as you would with a standard calculator. When you press the Add, Subtract, Multiply, or Divide buttons,

---

the buttons twist to let you know what to do.

## Settings

---

### ◆ SIM card management

You can set single card or dual card and set the main operation card information.

### ◆ WLAN

Turn on/off WIFI.

WiFi Settings: Turns on or off WIFI.

Network notification: Set the device notify when the network is available.

Add Wifi Network: Manually add WiFi access points.

### ◆ Blue Tooth

You can set up a BT connection with an electronic device within 10 meters. Bluetooth can be used to send pictures, videos, e-books and other data.

### ◆ Traffic usage

Data flow usage: Set the SIM card data cycle, display data flow when use the SIM card data.

More

Air palne mode: Disable all wireless features of the device. Only non-network services can be used

VPN: You need to set the lock screen PIN or password to use credential storage.

NFC: Enabled by default, allowing data to be exchanged when the phone is in contact with other devices.

---

Network sharing and portable hot spots: you can open the WIFI hotspot / USB shared network / Bluetooth shared network

Mobile network: You can set the card 1 / card 2 mobile network settings. .

USB Internet: Share Windows PC network via USB cable.

#### ◆ Scene mode

You can select the desired profile as you need. The profile options are Standard, Mute, Conference, and Outdoor mode. These modes are factory-set and you can customize the settings.

#### ◆ Display

You can set the screen display settings such as brightness, wallpaper, font size, auto rotate screen, and hibernation settings.

#### ◆ Storage

you can check the T card memory, the phone memory, preferred installation location, and so on.

#### ◆ Battery

Displays the elapsed time of the phone's battery and the battery's specific power consumption.

#### ◆ Application

You can manage your application, delete the native application, and move the storage location.

#### ◆ Location information access

You can set up access to my location information.

#### ◆ Safe

You can set parameters related to your phone's security, such as screen lock, SIM card lock, owner information, and password settings.

---

#### ◆ Language and Input method

You can use this interface to select languages and input methods.

#### ◆ Backup and reset

Reset DRm: Deletes all DRm licenses.

Restore factory settings: Clear all data on the phone.

#### ◆ Account

You can use this interface to manage your account and choose whether to synchronize data. When you bind your Google Account or Company account, the application can automatically synchronize the calendar, contacts, and messages in your Google Account.

Add Account: Add a new account

#### ◆ Date and time

Automatically update the time and set the time and date format.

#### ◆ Power on/off on time

On: Set a specific time, the phone will automatically boot at that time.

Off: set a specific time, the phone will ask you to shut down or not, if no, it will automatically shut down after 10 seconds.

#### ◆ Print

Google's built-in printing capabilities require device support.

#### ◆ Accessibility

Accessibility settings can be made to the phone.

#### ◆ Developer Options

Can carry out the operation of the system to the mobile phone, open the USB debugging plug USB connection pea pod / 91 assistant download

---

APK application.

◆ About phone

This screen allows you to view status information, battery usage, and phone model information.

## Maintenance

---

The following suggestions will help you take care of your mobile phone:

1. Keep your phone and all accessories away from children.
2. Please keep the phone dry, the liquid will cause corrosion of metal circuits.
3. Please keep phone away from high temperature, it will shorten the life of electronic equipment, the plastic melt and damage the battery.
4. Do not attempt to open the case or cell phone disassembly, non-professional demolition may cause damage to the phone.
5. Do not use strong acid or strong alkaline detergent to clean the phone.
6. only use the original mobile phone accessories. Violation of these will result in failure of the warranty or even the use of failure.

---

## Mobile phone environmental protection instructions

Parts	Hazardous Substance					
	(Pb)	(Hg)	(Cd)	(Cr6+)	(PBB)	(PBDE)
Phone	X	0	0	0	0	0
Battery	X	0	0	0	0	0
Accessories	X	0	0	0	0	0

O : Indicating that the content of the toxic and hazardous substances in all components of the component are in the SJ / T 11363-2006 standard requirements below the limit.

X : Indicates that the hazardous substances are present in at least one homogeneous material of the part in excess of the limits specified in the SJ / T 11363-2006 standard.

Note: This product is marked "X" because there are no alternative technologies or components to choose from at this stage.