

working principle:

1. Working by oil tank. the piston rod will push the movable seat, pressing filter plates to form sealed chambers. It could prevent the slurry from spurting and leakage when sending the slurry with pressure.
2. The slurry is sent to every sealed filter chamber by the feeding pump with pressure, going into filter plates and filter cloths. The clean water will be filtered out from the filter plate water outlet by the filter cloth, but the solid is kept in the chambers, to separate solid and liquid.



Abby Song

	+86-18701854523		+86-18701854523
	abbasong249		+86-18701854523
	+86-18701854523		sales1@filterpressure.com