


# NINGBO ZHONGWANG AUTO FITTINGS CO.,LTD

NO.50-1 TIANFENG ROAD,FENGHUA,ZHEJIANG,CHINA




TEL/FAX:0086-574-88956210/ WhatsApp: 0086-13515886684/ Wechat: 48655709

www.zowoparts.com

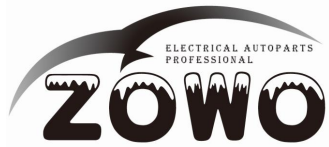



zwautoparts@vip.163.com







## BOSCH BRUSH HOLDER LIST

NO.	ZW NO.	OEM NO.	WAI NO.	DESCRIPTION	USED ON	FOTO
1	ZWBO-001			For : <ul style="list-style-type: none"><li>• Bosch Starters</li></ul> Dim:6x18x14.5		
2	ZWBO-002			For : <ul style="list-style-type: none"><li>• Bosch Starters</li></ul> Dim:5x12x11.5		
3	ZWBO-003			For : <ul style="list-style-type: none"><li>• Bosch Starters</li></ul> Dim:5x16x13		





4	ZWBO-004			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
5	ZWBO-005		69-9111	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13</p>		
6	ZWBO-006		69-9115	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
7	ZWBO-007			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		





8	ZWBO-008			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
9	ZWBO-009			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
10	ZWBO-010	<p>Replaces: Bosch 1 004 336 434, 1 004 336 980 Unit Nos: Audi, Volkswagen 053-911-023A, 053-911-023AX, 053-911-023B, 058-911-023B, 058-911-023BX; BMW 12 41 4 542 741, 12-41-1-489-994, 12-41-1-489-995, 12-41-1-517-327, 12-41-1-517-328, 12-41-7-570-487, 12-41-7-570-488, 1241542789; Bosch 0 001 106 018, 0 001 106 019, 0 001 107 031, 0 001 107 032, 0 001</p>	69-9121	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch PMGR Starters</li> </ul> <p>Features: • 100% New</p> <p>Dim:5x12x11.5</p>	<p>Aixam (2009-2016) , Aixam - Europe (2003-2005) , Audi (1997-2000) , Audi - China (1996-1999) , Audi - Europe (1986-2005) , BMW - Europe (2001-2006) , Chrysler (1995-2002) , Chrysler - Europe (1994-2010) , Dodge (1995-2005) , Eagle (1995-1998) , Husqvarna (2008-2012) , Lombardini (2009-2016) , Mercedes-Benz (2001-2004) , Microcar (2009-2016) , Mini (2002-2008) , Mitsubishi (1995-1999) , Mitsubishi - Europe</p>	
11	ZWBO-011			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13.5</p>		

12	ZWBO-012			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
13	ZWBO-013			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
14	ZWBO-014			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
15	ZWBO-015			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13</p>		


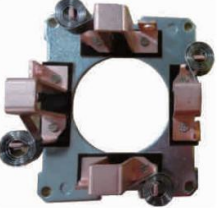


16	ZWBO-016			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10x18</p>		
17	ZWBO-017			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10x18</p>		
18	ZWBO-018			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
19	ZWBO-019			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x16x18</p>		

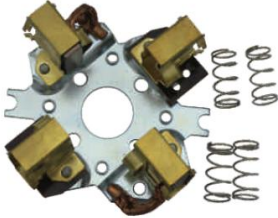

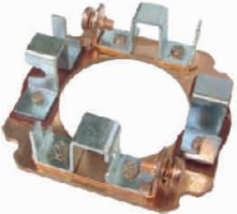
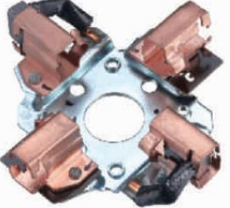
20	ZWBO-020			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6.4x25x16.5</p>		
21	ZWBO-021		69-9110	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x22x22.5</p>		
22	ZWBO-022			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x22x19.5</p>		
23	ZWBO-023			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:12x36x27</p>		

24	ZWBO-024			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x25x23</p>		
25	ZWBO-025	<p>Replaces: Audi, Volkswagen 061-911-209A, Bosch 2 005 854 053, 2 005 854 084, 2 005 854 136, DAF 609048, Fiat 79034658, 9919502, 9926111, Ford 715F-11061-CA, 733F-11K151-AA, IHC, Navistar 3078981R91, 3079017R91, 3113011R1, John Deere AL25270, KHD 1306017, 1310356, Original Reference Number 55-2002, Renault 7701009953, Volvo 243304, 7243304</p>	69-9102	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 358, 359 Series DD Starters</li> </ul> <p>Features: • 100% New</p> <p>Dim:10x25x23</p>	<p>ABG (Allg Baumasch Gesellsch) (1967-1982), Agrifull Europe (1980-1992), Agritalia (Carraro) (1967-1992), Aifo (1971-1983), Atlas (1973-1982), Atlas Copco (1969-1979), Bukh (1963-1979), Case (1981-1997), Claas (1966-1993), Deutz (1966-1982), Deutz-Fahr (1973-1994), Fahr (1968-1987), Fendt (1967-2004), Fiat - Europe (1972-1990), Fiat-Allis (1970-1988), Fiat-Hesston (1984-1993), Ford (1967-1976), Ford - Europe (1988-1996), Ford</p>	
26	ZWBO-026	<p>Replaces: Alfa Romeo 115400503000/25, 116760503000/07, Audi, Volkswagen 069-911-209, Bosch 2 001 329 907, 2 004 336 027, 2 004 336 041, 2 004 336 099, Fiat 79026095, 9936726, 9956672, 9983634, Ford 78GB-11061-AA, IHC, Navistar 3079174R1, 3079553R1, KHD 1308150, 1308802, 1309822, Original Reference Number BO 1431, PSA Peugeot Citroen 582569, Volvo 1257687</p>	69-9105	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 362, 366 Series DD Starters</li> </ul> <p>Features: • 100% New</p> <p>Dim:9x16x17</p>	<p>Agritalia (Carraro) (1969-1978), Aifo (1972-1983), Alfa Romeo - Europe (1978-1989), Allis Chalmers (1961-1968), Atlas (1973-1985), Atlas Copco (1973-1986), Audi (1979-1985), Bertolini (1969-1984), BMW (1979-1987), Bomag (1983-2006), BPM (1968-1992), Case (1972-2001), Claas (1976-1993), Cummins Mercruiser (2004-2005), David Brown (1956-1970), Deutz (1978-1994), Deutz-Fahr (1980-1994), ERF - Europe</p>	
27	ZWBO-027	<p>Replaces: Bosch 2 004 336 031, 2 004 336 046, Fiat 79033665, 9959809, KHD 1308847, 42487781, Original Reference Number 55-2000, BO 1451, Volvo 6210779</p> <p>Unit Nos: Agco Sisu Power 8366 643 54, 8366 643 54, 8366 746 49, 8366 746 49, 836664354, 836664354, F824 900 060 180, F824 900 060 180, F926 900 060 130, F926 900 060 130, V836664354, V836664354, V836674649</p>	69-9100	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 368 Series DD Starters</li> </ul> <p>Features: • 100% New</p> <p>Dim:8x25x17</p>	<p>Aifo (1978-1983), Case (1987-1992), Caterpillar Ag. &amp; Ind. (1984-2002), DAF - Europe (1970-1981), Deutz (1986-1994), Fendt (1993-2003), Fiat - Europe (1967-1984), Fiat-Allis (1971-1995), Fuchs (1975-1986), Hatz (1982-1989), Iveco (1986-1991), Iveco Fiat LCV / Heavy Duty - Europe (1978-2000), KHD (1986-1994), MAN - Europe (1979-2013), Mercedes Heavy Duty - Europe (1972-1994), Mercedes-Benz (1975-2006)</p>	





28	ZWBO-028	Replaces: Bosch 2 004 336 028, Fiat 79033957, 9817925, 9959566, Ford 82DB-11K182-AA, IHC, Navistar 3079357R1, John Deere AL70365, KHD 130-8817, 42487780, 4278-7780, Original Reference Number 55-2017, BO 1641, Renault 5000822885, Same 296191810, Steyr 40800090723, Volvo 6211877 Unit Nos: Agria 130652; BMW 12-41-1-333-980; Bomag 057-100-01	69-9106	For : <ul style="list-style-type: none"> <li>• Bosch 367 Series DD Starters</li> </ul> Notes: <ul style="list-style-type: none"> <li>• Without 68-9142 field brush</li> </ul> Features: <ul style="list-style-type: none"> <li>• 100% New</li> </ul> Dim:10x25x15	Agco Allis (1991-2000) , Agco White (1992-2000) , Agritalia (Carraro) (1987-1992) , Aifo (1978-1983) , Atlas Copco (1979-1982) , Case (1980-2004) , Caterpillar Ag. & Ind. (1995-2002) , Claas (1974-1982) , Deutz (1968-1982) , Deutz-Allis (1986-1992) , Deutz-Fahr (1973-1994) , Fahr (1978-1987) , Fendt (1974-2004) , Fiat-Allis (1971-1988) , Fiat-Hesston (1984-2001) , Ford (1991-2000) , Fuchs (1979-1980) , Hatz (1979-1980)	
29	ZWBO-029	Replaces: Bosch 1 004 112 906, 1 004 112 907, 1 004 336 218, 9 001 337 084, 9 003 334 314, Original Reference Number 55-2018 Unit Nos: Alfa Romeo 14736380080, 14754890080, 195270503000, 605129690, 605225650, 7716196, 9611705880; Audi, Volkswagen 039-911-023, 046-911-023B, 046-911-023BX, 069-911-023B, 069-911-023C, 069-911-023C, 069-911-023CY, 069-	69-9118	For : <ul style="list-style-type: none"> <li>• Bosch 218 Series PLGR Starters</li> </ul> Features: <ul style="list-style-type: none"> <li>• 100% New</li> </ul> Dim:7.5x18x18.5	Audi - Europe (1981-1998) , BMW (1985-2001) , BMW - Europe (1990-2001) , Bomag (1997-2006) , Chrysler - Europe (1992-2001) , Citroen - Europe (1994-2002) , Citroen LCV - Europe (1994-2000) , Daewoo - Europe (1999-2002) , Deutz (1995-2007) , Fiat - Europe (1987-1998) , Fiat LCV - Europe (1986-1999) , Ford - Europe (1984-2002) , Ford LCV - Europe (1986-1994) , Iveco Fiat LCV / Heavy Duty - Europe (1978-2007) , KHD (1995-2007) , Land	
30	ZWBO-030			For : <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> Dim:6x18x14.5		
31	ZWBO-031			For : <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> Dim:9x16x23		



32	ZWBO-032			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters Dim:10x25x23.5</li> </ul>		
33	ZWBO-033	<p>Replaces: Bosch 2 004 336 051, Caterpillar 3T0862, Fiat 79058482, Original Reference Number 55-2007</p> <p>Unit Nos: AVF IM663; Bosch 0 001 420 001, 0 001 420 002, 0 001 420 003, 0 001 420 004, 0 001 420 005, 0 001 420 006, 0 001 420 007, 0 001 420 008, 0 001 420 009, 0 001 420 010, 0 001 420 011, 0 001 420 012, 0 001 420 013, 0 001 420 014, 0 001 420 015, 0 001 420 017, 0 001 420 018, 0 001 420 019, 0 001 420 020, 0 001 420 021, 0 001 420 022, 0 001 420 023, 0 001 420 024, 0 001 420 025, 0 001 420 026, 0 001 420 027, 0 001 420 028, 0 001 420 029, 0 001 420 030, 0 001 420 031, 0 001 420 032, 0 001 420 033, 0 001 420 034, 0 001 420 035, 0 001 420 036, 0 001 420 037, 0 001 420 038, 0 001 420 039, 0 001 420 040, 0 001 420 041, 0 001 420 042, 0 001 420 043, 0 001 420 044, 0 001 420 045, 0 001 420 046, 0 001 420 047, 0 001 420 048, 0 001 420 049, 0 001 420 050, 0 001 420 051, 0 001 420 052, 0 001 420 053, 0 001 420 054, 0 001 420 055, 0 001 420 056, 0 001 420 057, 0 001 420 058, 0 001 420 059, 0 001 420 060, 0 001 420 061, 0 001 420 062, 0 001 420 063, 0 001 420 064, 0 001 420 065, 0 001 420 066, 0 001 420 067, 0 001 420 068, 0 001 420 069, 0 001 420 070, 0 001 420 071, 0 001 420 072, 0 001 420 073, 0 001 420 074, 0 001 420 075, 0 001 420 076, 0 001 420 077, 0 001 420 078, 0 001 420 079, 0 001 420 080, 0 001 420 081, 0 001 420 082, 0 001 420 083, 0 001 420 084, 0 001 420 085, 0 001 420 086, 0 001 420 087, 0 001 420 088, 0 001 420 089, 0 001 420 090, 0 001 420 091, 0 001 420 092, 0 001 420 093, 0 001 420 094, 0 001 420 095, 0 001 420 096, 0 001 420 097, 0 001 420 098, 0 001 420 099, 0 001 420 100</p>	69-9109	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 420 Series DD Starters</li> </ul> <p>Notes: • Without 68-9135 brush</p> <p>Features: • 100% New Dim:5x10x17</p>	<p>Caterpillar Ag. &amp; Ind. (1984-1999) , Fiat-Allis (1978-1995) , Volvo (1987-1992) , Volvo Heavy Duty - Europe (1987-1999) , Volvo Penta (1988-2005) , Western Star HD (1975-1984)</p>	
34	ZWBO-034	<p>Replaces: Bosch 2 004 336 031, 2 004 336 046, Fiat 79033665, 9959809, KHD 1308847, 42487781, Original Reference Number 55-2000, BO 1451, Volvo 6210779</p> <p>Unit Nos: Agco Sisu Power 8366 643 54, 8366 643 54, 8366 746 49, 8366 746 49, 836664354, 836664354, F824 900 060 180, F824 900 060 180, F926 900 060 130, F926 900 060 130, V836664354, V836664354, V836674649</p>	69-9100	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 368 Series DD Starters</li> </ul> <p>Features: • 100% New Dim:5x8x18</p>	<p>Aifo (1978-1983) , Case (1987-1992) , Caterpillar Ag. &amp; Ind. (1984-2002) , DAF - Europe (1970-1981) , Deutz (1986-1994) , Fendt (1993-2003) , Fiat - Europe (1967-1984) , Fiat-Allis (1971-1995) , Fuchs (1975-1986) , Hatz (1982-1989) , Iveco (1986-1991) , Iveco Fiat LCV / Heavy Duty - Europe (1978-2000) , KHD (1986-1994) , MAN - Europe (1979-2013) , Mercedes Heavy Duty - Europe (1972-1994) , Mercedes-Benz (1975-2006)</p>	
35	ZWBO-035			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters Dim:5x10x17</li> </ul>		


36	ZWBO-036			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
37	ZWBO-037			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
38	ZWBO-038			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13.5</p>		
39	ZWBO-039			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:9x16x17</p>		

40	ZWBO-040	Replaces: Audi, Volkswagen 068-911-209A, 068-911-209D, Bosch 1 004 336 100, 1 004 336 900, Original Reference Number 55-2022 Unit Nos: Audi, Volkswagen 068-911-0023MX, 068-911-023C, 068-911-023D, 068-911-023E, 068-911-023EX, 068-911-023J, 175-911-023A, 175-911-023AX; Bosch 0 001 317 007, 0 001 317 008, 0 001 317 009, 0 001 317 010, 0 001 317 011, 0 001 317	69-9114	For : <ul style="list-style-type: none"> <li>• Bosch 312, 317 Series DD Starters</li> </ul> Features: <ul style="list-style-type: none"> <li>• 100% New</li> </ul> Dim:7x16x15	Audi (1982-1983) , Audi - Europe (1982-1986) , Ford - Europe (1984-2000) , Ford LCV - Europe (1984-1986) , Volkswagen (1981-1985) , Volkswagen - Europe (1980-1990) , Volkswagen LCV - Europe (1981-1992)	
41	ZWBO-041	Replaces: Audi, Volkswagen 049-911-209D, Bosch 1 004 336 901, Original Reference Number 55-2024 Unit Nos: Audi, Volkswagen 026-911-023, 026-911-023B, 026-911-023X, 049-911-023G; Bosch 0 001 208 508, 0 001 208 515, 0 001 208 516, 0 001 208 517, 0 001 208 521, 0 001 208 526, 0 001 208 528, 0 001 208 702, 0 001 208 706, 0 001 208 707, 0 001 208 709, 0 001 208 710, 0 001 208	69-9117	For : <ul style="list-style-type: none"> <li>• Bosch 208 Series DD Starters</li> </ul> Features: <ul style="list-style-type: none"> <li>• 100% New</li> </ul> Dim:7x10x14	Audi (1981-1990) , Audi - Europe (1980-1996) , Citroen - Europe (1983-2001) , Fiat - Europe (1994-2002) , Nissan - Europe (1984-1994) , Peugeot (1989-1991) , Renault - Europe (1980-2003) , Volkswagen (1982-1993) , Volkswagen - Europe (1979-1988)	
42	ZWBO-042			For : <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> Dim:6x22x15		
43	ZWBO-043			For : <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> Dim:8x19x18		

44	ZWBO-044			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:8x19x18</p>		
45	ZWBO-045			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
46	ZWBO-046			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
47	ZWBO-047	<p>Replaces: Bosch 1 194 336 038, Chrysler 5226848 Unit Nos: Bosch 0 120 400 013, 0 120 450 011, 0 120 450 012, 0 120 450 013, 0 120 450 014, 0 120 450 016, 0 120 450 017, 0 120 500 650, 0 120 500 652; Chrysler 4419187, 5226008, 5226059, 5226060, 5226432, 5226600, 5233574, 5233718 Lester Nos: 14780</p>	39-9102	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch 90-100A ER/EF Alternators</li> </ul> <p>Features:</p> <ul style="list-style-type: none"> <li>• 100% New</li> </ul> <p>Dim:4.8x17x16</p>	Chrysler (1984-1990) , Dodge (1985-1989) , Plymouth (1985- 1989)	

48	ZWBO-048			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10x15.5</p>		
49	ZWBO-049			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10x15.5</p>		
50	ZWBO-050			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10</p>		
51	ZWBO-051			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:9x36.5x13</p>		





52	ZWBO-052			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
53	ZWBO-053			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
54	ZWBO-054			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
55	ZWBO-055			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		





56	ZWBO-056			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
57	ZWBO-057			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13.5</p>		
58	ZWBO-058			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
59	ZWBO-059			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		

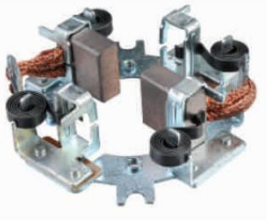



60	ZWBO-060			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
61	ZWBO-061			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
62	ZWBO-062			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5.5x28x18</p>		
63	ZWBO-063			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6.5x28x18</p>		



64	ZWBO-064			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:4.5x10x13</p>		
65	ZWBO-065			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
66	ZWBO-066			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x22x19.5</p>		
67	ZWBO-067			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x25x23.5</p>		


68	ZWBO-068			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x25x23.5</p>		
69	ZWBO-069	<p>Replaces: Bosch 1 004 336 337, 1 004 336 823, 1 004 336 832 Unit Nos: Bosch 0 001 108 022, 0 001 108 022, 0 001 108 051, 0 001 108 143, 0 001 108 143, 0 001 108 172, 0 001 108 181, 0 001 108 199, 6 004 AA2 003, 6 004 AA2 014; Chrysler JR775133; Delco 19135633, 21019221, 9136093; GM 24451168; Jeep-Eagle JR775133; Letrika (Iskra) 11 130 957 11 130 957; Maralli</p>	69-9125	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch PMGR Starters</li> </ul> <p>Features: • 100% New</p> <p>Dim:6x8x14.5</p>	Renault (1985-1987) , Renault - Europe (1988-2002) , Saab (1999-2003) , Saab - Europe (1998-2001) , Saturn (2000-2005)	
70	ZWBO-070			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
71	ZWBO-071			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		

72	ZWBO-072			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x25x15</p>		
73	ZWBO-073		69-9110	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:10x22x23.5</p>		
74	ZWBO-074	<p>Replaces: Bosch 1 004 336 337, 1 004 336 823, 1 004 336 832 Unit Nos: Bosch 0 001 108 022, 0 001 108 022, 0 001 108 051, 0 001 108 143, 0 001 108 143, 0 001 108 172, 0 001 108 181, 0 001 108 199, 6 004 AA2 003, 6 004 AA2 014; Chrysler JR775133; Delco 19135633, 21019221, 9136093; GM 24451168; Jeep-Eagle JR775133; Letrika (Iskra) 11 130 957 11 130 957; Maralli</p>	69-9125	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch PMGR Starters</li> </ul> <p>Features:</p> <ul style="list-style-type: none"> <li>• 100% New</li> </ul> <p>Dim:5x16x13</p>	Renault (1985-1987) , Renault - Europe (1988-2002) , Saab (1999-2003) , Saab - Europe (1998-2001) , Saturn (2000-2005)	
75	ZWBO-075			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		

76	ZWBO-076			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
77	ZWBO-077			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x16x13.5</p>		
78	ZWBO-078			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x16x18</p>		
79	ZWBO-079			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:4.5x8.5x10.8</p>		

80	ZWBO-080			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x18x14.5</p>		
81	ZWBO-081			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:9x36x18</p>		
82	ZWBO-082			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:6x22x15</p>		
83	ZWBO-083			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:4.5x8.5x10.8</p>		

84	ZWBO-084			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
85	ZWBO-085			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:7x10x16.5</p>		
86	ZWBO-086			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:3.5/9.5x11.6x15.9</p>		
87	ZWBO-087			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:4.5x8.5x10.8</p>		

88	ZWBO-088			<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch Starters</li> </ul> <p>Dim:5x12x11.5</p>		
89	ZWBO-089	<p>Replaces:</p> <p>Audi, Volkswagen 020-911-209B, 020-911-209F, 02B-911-209, 053-911-209, 377-911-984,</p> <p>Bosch 1 004 336 239, 1 004 336 397, 1 004 336 415, 1 004 336 417, 1 004 336 421, 1 004 336 428, 1 004 336 432, 1 004 336 462, 1 004 336 715, 1 004 336 728, 1 004 336 744, 1 004 336 746, 1 004 336 776, 1 004 336 801, 1 004 336 809, 1 004 336 813, 1 004 336 814, 1 004 336 820, 1 004 336 821, 1 004 336</p>	69-9116	<p>For :</p> <ul style="list-style-type: none"> <li>• Bosch PMGR Starters</li> </ul> <p>Features:</p> <ul style="list-style-type: none"> <li>• 100% New</li> </ul> <p>Dim:5x12x11.5</p>	<p>Aixam (2009-2016) , Alfa Romeo - Europe (1995-2010) , Audi (1997-2006) , Audi - China (1996-1999) , Audi - Europe (1986-2006) , BCS (1968-1992) , Bertolini (1969-1992) , Chevrolet - Europe (2005-2012) , Citroen - Europe (1989-2001) , Daewoo - Europe (1995-2005) , Daihatsu - Europe (1996-1998) , Ferrari (1971-1992) , Fiat - Europe (1993-2012) , Ford (2001-2009) , Ford - Europe (1980-2015) , Ford LCV - Europe (1985-2003)</p>	