


# NINGBO ZHONGWANG AUTO FITTINGS CO.,LTD

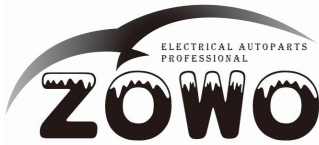

NO.50-1 TIANFENG ROAD,FENGHUA,ZHEJIANG,CHINA

TEL/FAX:0086-574-88956210/ WhatsApp: 0086-13515886684/ Whechat: 48655709

www.zowoparts.com

zwautoparts@vip.163.com

## DENSO SOLENOID LIST


NO.	ZW NO.	OEM NO.	WAI NO.	DESCRIPTION	USED ON	FOTO
1	ZWNI-001-SD	Unit Nos: Audi, Volkswagen 7B0-911-023; Bombardier / Can-Am / Sea Doo DAW26844; Chrysler 04748046AA, 04748046AB, 04748046AC, 04801256AA, 04801256AB,	66-8220	For : • Denso DD, PLGR Starters Dimensions: • Batt. Term. M8 x 1.25 • Motor Term. M8 x 1.25 • Switch Term. Male Spade Notes: • Used in 66-8205, 66-8210 Solenoids.	Bombardier (2004-2005) , Can-Am (2004-2005) , Chrysler (2006-2010) , Chrysler - Europe (2007-2007) , Cub Cadet (1997-2005) , Daihatsu - Europe (1988-2000) , Dodge (2006-2010) , Ford (1983-1986) , Hyundai - Europe (1985-1991) ,	
2	ZWNI-002-SD	Replaces: Denso 153400-1520 Unit Nos: Denso 228000-5842, 228000-6730, 228000-6740, 228000-6750, 228000-6760, 228000-8540, 228000-8542, 228000-8550; Marelli 063280055010,	66-8221	For : • Denso PLGR Starters Dimensions: • Batt. Term. M8 x 1.25 • Motor Term. M8 x 1.25 • Switch Term. D-Shape Plug Features: • 100% New	Toyota (1998-2012) , Toyota - Europe (1999-2006)	
3	ZWNI-003-SD	Replaces: Denso 153400-7610 Unit Nos: Acura 06312-PLR-505RM, 31200-PLR-A01RM, 31200-PLR-A02, DJDE4, DSDEU; Denso 228000-9580, 228000-9641, 428000-0320, 428000-0321; Honda 06312-PLR-	66-8223	For : • Denso PLGR Starters Dimensions: • Batt. Term. M8 x 1.25 • Motor Term. M8 x 1.25 • Switch Term. Male Spade Features: • 100% New	Acura (2001-2005) , Honda (2001-2005) , Honda - Europe (2001-2005)	
4	ZWNI-004-SD	Replaces: Denso 028099-9791, 153400-0000, 153400-8413, Toyota 28226-22061 Unit Nos: Denso 428000-0024, 428000-0340, 428000-0341, 428000-1311; GM 88969483; Scion 28100-	66-8225	For : • Denso PMGR Starters Dimensions: • Batt. Term. M8 x 1.25 • Motor Term. M8 x 1.25 • Switch Term. Male Spade Features: • 100% New	Pontiac (2003-2008) , Scion (2004-2006) , Toyota (2003-2018) , Toyota - China (2004-2006)	

5	ZWNI-005-SD		66-8227			
6	ZWNI-006-SD	Replaces: Denso 053400-8520 Unit Nos: Allis-Chalmers 4530350; Caterpillar 143-0536, 7C2264, 8T8619; Clark C07889; Daewoo D160591; Daihatsu Motor Co 28100-47050, 28100-47051, 28100-	66-8229	For : • Denso 2.5kW OSGR Starters Dimensions: • Batt. Term. M10 x 1.5 • Motor Term. M10 x 1.5 • Switch Term. 8-32 Hole Features: • 100% New	Allis Chalmers (1982-2000) , Caterpillar Ag. & Ind. (1989-2003) , Daihatsu - Europe (1984-2001) , Daihatsu LCV - Europe (1984-2001) , Hyster (1970-2006) , John Deere (1978-1990) , Kubota (1978-2001) , Spra-Coupe (1998-2004)	
7	ZWNI-007-SD		66-8230			
8	ZWNI-008-SD	Replaces: Denso 153400-7660 Unit Nos: Denso 228000-9270; Marelli 944280527140; Original Reference Number 23300-AA4209L; Subaru 23300-AA420 Lester Nos: 17850	66-8231	For : • Denso PLGR Starters Dimensions: • Batt. Term. M8 x 1.25 • Motor Term. M8 x 1.25 • Switch Term. Male Spade Features: • 100% New	Saab (2005-2005) , Subaru (2002-2007) , Subaru - Europe (2003-2012)	
9	ZWNI-009-SD		66-8233			

10	ZWNI-010-SD	Replaces: Denso 153400-4110, 153400-4111 Unit Nos: Denso 228000-4890, 228000-4891, 228000- 5780, 228000-6460, 228000-8330, 228000- 8490, 428000-3920; Honda 31200-P06-L03,	66-8222	For : <ul style="list-style-type: none"> <li>Denso PLGR Starters</li> </ul> Dimensions: <ul style="list-style-type: none"> <li>Batt. Term. M8 x 1.25</li> <li>Motor Term. M8 x 1.25</li> </ul> Features: <ul style="list-style-type: none"> <li>100% New</li> </ul>	Honda (1997-2009) , Honda - Europe (1999-2002)	
11	ZWNI-011-SD		66-8180			
12	ZWNI-012-SD		66-8181			
1	ZWND-001-SD		66-8960			

2	ZWND-002-SD		66-8961			
3	ZWND-003-SD		66-8962			
4	ZWND-004-SD		66-8964			

5	ZWND-005-SD		66-8966			
6	ZWNI-006-SD		66-8968			
7	ZWND-007-SD		66-8970			

8	ZWND-008-SD		66-8972			
---	-------------	--	---------	--	--	--